

Super Talent Technology Corporation



PS302 Password Protection Android User Manual

Contents

1	Pr	oduct Introduction	3
2	Ο	perating Instructions	3
	2.1	Supported Android Version	3
	2.2	Run the APP	3
	2.3	Set New Password	3
	2.4	Unlock Device	5
	2.5	Change the Password	6
	2.6	Clear the Password	8
	2.7	User Guide	9

1 Product Introduction

PS302 Password Protection is designed to protect the user's data with a password. When using it on an Android device, the user needs to enter the password in order to access the protected Removable/Security disk.

2 Operating Instructions

2.1 Supported Android Version

Android 13 and above.

2.2 Run the APP

Click the icon of the app and grant permission.



2.3 Set New Password

2.3.1 Enter the password in the 'New Password' field, and then press 'OK'.

🕈 Password	Protection
Enter Password	
UNLOCK	LOCK
🔽 New/Char	ige Password
Current Password	
••3	Q
ОК	User Guide
New Password, and click OK. Note: If you type a wrong password, If you require more chances, r	you have 4 chances to try. emove and reinsert drive
SUPER *	TALENT
Password Protection Us	er Guide
Create Password:	
1. Create a password betwee the field labeled "New F	en 4 and 16 characters in Password", and click "OK"
2. Confirm your selected pa labeled "Confirm Passw	assword in the field rord" and click "Confirm".
3. When the password is se "New Password setting blue below.	t successfully, a message done!!" will appear in

2.3.2 Re-enter the password and press 'CONFIRM'.

Confirm password:						
••3		Ø				
	CANCEL	CONFIRM				

2.3.3 When you have completed the setup, a window will appear as shown below with the message 'Password has been changed! Unlocked!'. Then the device is unlocked with the password and shown on the Android system.



\leftarrow		USB	+	¢
USB s	torage >			
	System Volu 02:01 PM 4 it	u me Informati ^{ems}	on	>
	Android 02:06 PM 1 it	em		>
	\$RECYCLE.I 01:57 PM 4 it	BIN ems		>

- 2.4 Unlock Device
 - 2.4.1 After setting the Password and connecting the device, enter the password in the 'Enter Password' field and press 'UNLOCK'.



2.4.2 The device is unlocked, and then the message 'Password correct! Unlocked!' is displayed on the Android device.



- 2.5 Change the Password
 - 2.5.1 Click the check box on the left of the 'New/Change Password'.



2.5.2 Enter your current password in the 'Current Password' field, enter your new password in the 'New Password' field, and then press 'OK'.

💔 Password Pr	otection
Enter Password	
UNLOCK	LOCK
🔽 New/Change	Password
123	Ø
****	Q
ок	User Guide
TT USB drive is unlocker ote: you type a wrong password, you you require more chances, remo	d! have 4 chances to try. ve and reinsert drive
TT USB drive is unlocker lata: you type a wrong password, you you require more chances, remo SUPER *TA	have 4 chances to try. ve and reinsert drive
ISTT USB drive is unlocker lota: You type a wrong password, you you require more chance, remo SUPER * TA Password Protection User G	dl have 4 chances to try, ve and reinsert drive LENT uide
STT USB drive is unlocker iote: you type a wrong password, you you require more chances, remo SUPER*TA Password Protection User G Create Password: I. Create a password between 4 the field labed "Iver Pass	have 4 chances to try. ve and reinsert drive LENT uide
STT USB drive is unlocked lote: you type a wrong password you you require more chances, remo SUPER * TA Password Protection User G Create Password: 1. Create a password between 4 the field labeled "New Pass. 2. Confirm your selected passw labeled "Confirm Password:	have 4 chances to try, ve and reinsert drive LENT uide Land 16 characters in vord", and click "OK" ord in the field "and click confirm".
STT USB drive is unlocker iote: you type a wrong password, you you require more chances, remo SUPER*TA Password Protection User G Create Password: 1. Create a password between 4 the field labeled "New Password 1. Stated "Confirm Password" 5. When the password is set su "New Password setting doo blue below.	dl have 4 chances to try, ve and reinsert drive LENTE uide 4 and 16 characters in vord', and click "OK" ord in the field and click "Confirm". ccessfully, a message ne!!" will appear in

2.5.3 Re-enter the Password and press 'CONFIRM'.

•	
****	Ø
CANCEL	CONFIRM

2.5.4 When you have completed the setup, and a window will appear as shown below with the message 'Password has been changed! Unlocked! '.



- 2.6 Clear the Password
 - 2.6.1 Click the checkbox to the left of 'New/Change Password', enter the password

in the 'Current Password' field, leave the 'New Password' field empty, and then press 'OK'.

V Password F	Protection
Enter Password	
UNLOCK	LOCK
🗹 New/Change	Password
* * * *	Q
New Password	R
ок	User Guide
STT USB drive is unlock Note: If you type a wrong password, yo	ed!
STT USB drive is unlock Note: If you type a wrong password, yo If you require more chances, rem SUPER * T/ Password Protection Line;	ed! u have 4 chances to try. iove and reinsert drive
STT USB drive is unlock Note: If you type a wrong password, yc If you require more chances, rem SUPER * T/ Password Protection User Create Password:	ed! u have 4 chances to try, ove and reinsert drive NLEINT Guide
STT USB drive is unlock Note: If you type a wrong password, ye If you require more chances, rem SUPER * 17/ Password Protection User Create Password: 1. Create a password: 1.	ed! u have 4 chances to try, ove and reinsert drive ALENT Guide 4 and 16 characters in sword", and click "OK"
STT USB drive is unlock Note: If you type a wrong password, you if you require more chances, rem SUPER *T/ Password Protection User Create Password: 1. Create a password between the field labeled "New. Pas 2. Confirm your selected pass labeled" Confirm Password	ed! u have 4 chances to try, ove and reinsert drive XLENT Guide 4 and 16 characters in sword", and click "OK" word in the field and click "Confirm".
STT USB drive is unlock Note: If you type a wrong password yo If you require more chances, rem SUPER * 17/ Password Protection User Create Password: 1. Create a password between the field labeled "New Pass labeled "Confirm Password 3. When the password setting d blue below.	ed! u have 4 chances to try, ove and reinsert drive LENT Guide 4 and 16 characters in sword", and click "OK" word in the field d" and click "Confirm", uccessfully, a message one!!" will appear in

2.6.2 When the password confirmation window pops up, leave the 'Enter Password' field empty and press 'CONFIRM'.

Confirm password:	
Enter Password	Ø
CANCEL	CONFIRM

2.6.3 The password will be cleared, and the screen will display the message 'Password has been cleared! Unlocked!'.



2.7 User Guide

2.7.1 Press the 'User Guide' button to review/close instructions.

🕈 Password Protection	😌 Password Protection				
Enter Password		Enter	r Password		
			UNLOCK	LOCK	
New/Change Password			New/Cho	nge Password	
Current Password		Curr	ent Password	i	
New Password		New	Password		
OK User Guide			ОК	User Guide	
no USB device is found		no USB	device is fou	nd	
Note: If you type a wrong password, you have 4 chances t If you require more chances, remove and reinsert dr	Note: If you type a wrong password, you have 4 chances to try. If you require more chances, remove and reinsert drive				
SUPER * TALENT		SUPER * TALENT			
Password Protection User Guide					
Create Password:					
 Create a password between 4 and 16 character the field labeled "New Password", and click ' 					
Confirm your selected password in the field labeled "Confirm Password" and click "Conf					
 When the password is set successfully, a mes "New Password setting done!!" will appear blue below. 	sage in				
Chanoe Password:					